


- l. Assign location of equipment considering the space (minimum space) requirement.
- 2. Excavate soil for foundations, according to drawing. Please note: To achieve a maximum of stability and a safe installation a normal level of soil solubility is required.
- 3. At first screw together 1 supporting stand left and 1 supporting stand right with straight beam (see detail: "Assembling of supporting stands").
- 4. Screw another 1 supporting stand left and another 1 supporting stand right together with the second straight beam. Then bolt down double-T-shaped beam to flanges of supporting stands (see detail: "Assembling of supporting stands"), raise unit using appropriate device (e.g. small crane), and put assembly into foundation holes. Support temporality, in accordance with all security-related rules. Please note: If all four supports are screwed on double-T-shaped beam in a lying position, this will lead to an overstress of the connecting bends at the two free supports and also at the other two supports at the moment the whole assembly will be erected!
- 5. Afterwards screw pre-assembled framework (see point 3) together with flanges of double-T-shaped beam (see detail: "Assembling of supporting stands"). Align item horizontally (pay attention to the heights of the play level marks of supporting stands).
- 6. Grout in foundations with compressed concrete C20/25.
- 7. Cover foundations with a surface which shall meet the requirements for impact attenuation so that the critical fall height of the surfacing shall be equal to, or greater than, the free height of fall of the equipment (acc. to EN 1176–1).
- 8. Release for play after concrete foundations have set.
- 9. Check all screw connections according to maintenance instructions after 4–5 weeks and screw down again if necessary.

Please take care that all special tools (e.g. special Allen key for secured Allen screws etc.) and all specific documents which are or may be useful for safety management acc. to EN 1176-7, point 8 (e.g. invoice, delivery note, order acknowledgement, installation instructions, maintenance instructions) are forwarded to the responsible persons

Installation

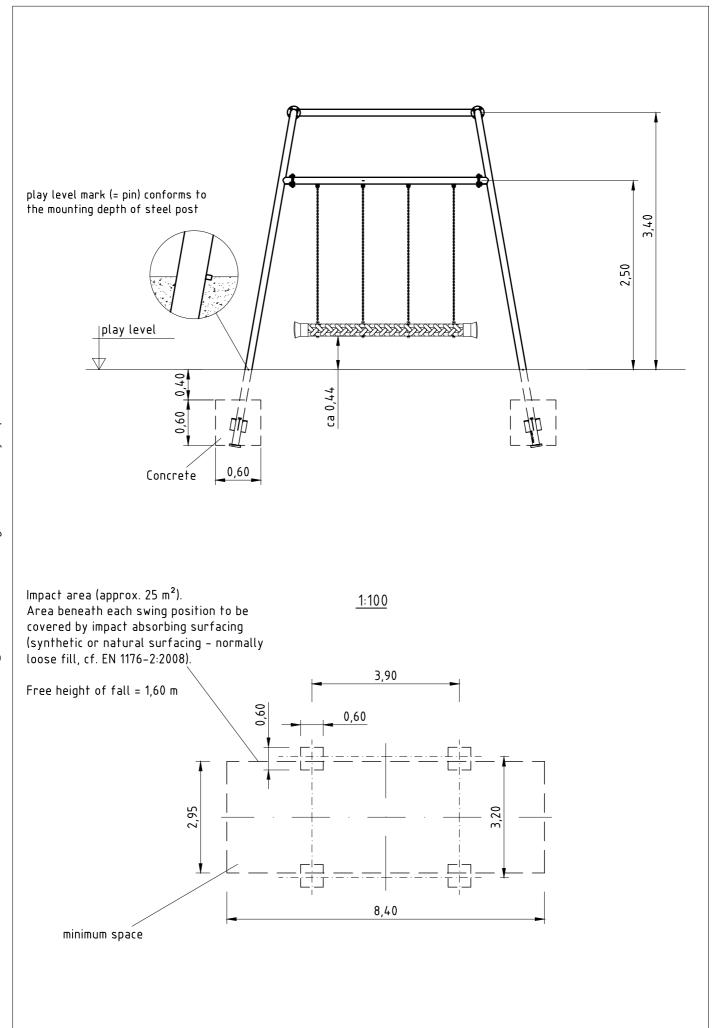

Assembling of supporting stands:


4x screw connection per supporting stand or beam


consisting of:

hexagonal screw DIN 933-M16x45-zinc coated; 2x washer DIN 125-17-zinc coated; prevailing torque type hexagon domed cap nut; DIN 986-M16-zinc coated;

2. Then screw another 1x supporting stand left and 1x supporting stand right (according to drawing) together with the second straight beam. Afterwards bolt down double-T-shaped beam to flanges of supporting stands. Raise unit and put into foundation holes (see also page 1 / point 4).


 Screw 1x supporting stand left and 1x supporting stand right (according to drawing) together with straight beam (see also page 1 / point 3).

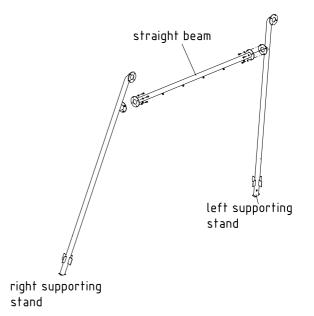


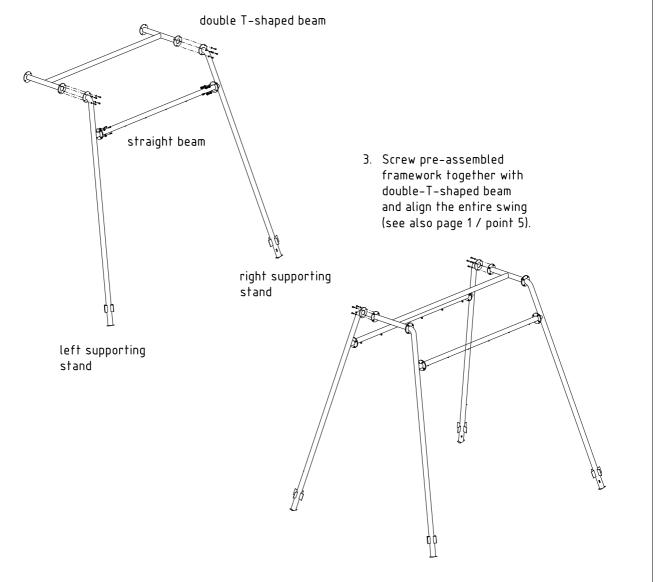


Detail Opening of chain mounting:

- 1. Dismantle set screw M6x12 (width across flats: 3 mm).
- 2. Draw-off the shaft.



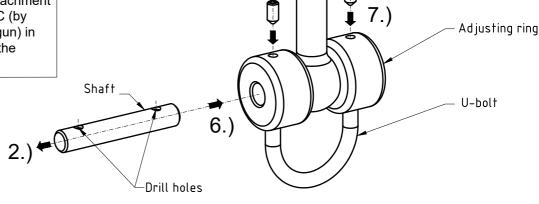

1.)

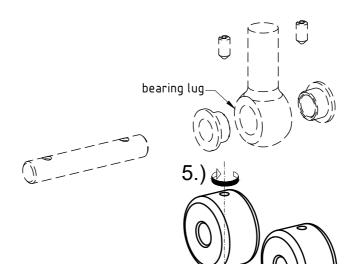

- 3. Twist off one adjusting ring from U-bolt.
- 4. Insert or remove chain link.

Detail Locking of chain mounting:

- Screw adjusting ring on U-bolt, see point 5.) in the sketch above
 <u>Attention:</u> The tapped holes of adjusting rings are positioned
 <u>off-centre</u>: Please set the minimal gap up (between adjusting ring
 and bearing lug).
- 6. Insert shaft through adjusting rings and bearing lug. Attention: Check the position of the drill holes!
- 7. Tighten set screws M6x12 (width across flats: 3 mm) with screw locking medium strength.

chain

Set screw